


CANALI DMX

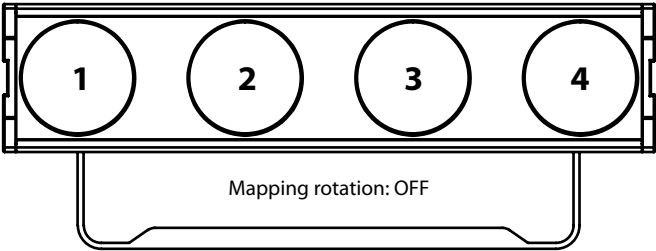

HALO 1ch		
MODE 1 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255

Nella modalità HALO, la fixture emulerà un classico DWE simulando curva dimmer e temperatura del bianco.

HALO 4ch		
MODE 4 Ch	FUNCTION	DMX Value
1	PIXEL 1 Dimmer 0~100%	000 - 255
2	PIXEL 2 Dimmer 0~100%	000 - 255
3	PIXEL 3 Dimmer 0~100%	000 - 255
4	PIXEL 4 Dimmer 0~100%	000 - 255

STANDARD - STD 4ch		
MODE STD 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

STANDARD - STD 6ch		
MODE STD 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255

STANDARD - STD 15ch

MODE STD 15 Ch	FUNCTION	DMX Value
1	DIMMER - 0~100%	000 - 255
2	RED - 0~100%	000 - 255
3	GREEN - 0~100%	000 - 255
4	BLUE - 0~100%	000 - 255
5	WHITE - 0~100%	000 - 255
6	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
7	COLOR FUNCTION No Function CTC Function Forward Spin Reverse Spin Color Presets HALO DWE TBD	000 - 010 011 - 039 040 - 059 060 - 079 080 - 099 100 - 119 120 - 255
8	CTC Function (fade change) 2000K~3000K 3000K~4000K 4000K~5600K 5600K~8000K 8000K Forward Spin Rainbow Effect - Slow to Fast Reverse Spin Rainbow Effect - Slow to Fast Color Preset (fade change) R 100% G 0~100% B 0% R 100%~0% G 100% B 0% R 0% G 100% B 0~100% R 0% G 100%~0% B 100% R 0%~100% G 0% B 100% R 100% G 0% B 100%~0% R 100% G 0%~100% B 0%~100% R 100%~0% G 100%~0% B 100% R 100% G 100% B 100% W 100% Halo DWE Dimmer 0~100%	000 - 223 224 - 231 232 - 239 240 - 247 248 - 255 000 - 255 000 - 255 000 - 028 029 - 056 057 - 084 084 - 112 113 - 140 141 - 168 169 - 196 197 - 224 225 - 255 000 - 255

	DYNAMIC PATTERNS No Function Pattern 1 Pattern 2 Pattern 3 Pattern 4 Pattern 5 Pattern 6 Pattern 7 Pattern 8 Pattern 9 Pattern 10 Pattern 11 Pattern 12 Pattern 13 Pattern 14 Pattern 15 Pattern 16 Pattern 17 Pattern 18 Pattern 19 Pattern 20 Pattern 21 Pattern 22 Pattern 23 Random Pattern	000 - 010 011 - 020 021 - 030 031 - 040 041 - 050 051 - 060 061 - 070 071 - 080 081 - 090 091 - 100 101 - 110 111 - 120 121 - 130 131 - 140 141 - 150 151 - 160 161 - 170 171 - 180 181 - 190 191 - 200 201 - 210 211 - 220 221 - 230 231 - 240 241 - 255
9		
10	PATTERNS SPEED Static indexing Speed slow to fast TBD / Not used	000 - 029 030 - 140 141 - 255
11	FOREGROUND COLOR No function (COLOR FUNCTION CHANNEL) R G B W GB RB RG RGB RW GW BW RGW RBW GBW RGBW	000 - 012 013 - 025 026 - 038 039 - 051 052 - 064 065 - 077 078 - 090 091 - 103 104 - 116 117 - 129 130 - 142 143 - 155 156 - 168 169 - 181 182 - 194 195 - 207

11	White 2000K White 3000K White 4000K Color Cycling	208 - 220 221 - 233 234 - 246 247 - 255
12	FOREGROUND DIMMER 0~100%	000 - 255
13	BACKGROUND COLOR No function (main RGBW channels control) R G B W GB RB RG RGB RW GW BW RGW RBW GBW RGBW White 2000K White 3000K White 4000K Color Cycling	000 - 012 013 - 025 026 - 038 039 - 051 052 - 064 065 - 077 078 - 090 091 - 103 104 - 116 117 - 129 130 - 142 143 - 155 156 - 168 169 - 181 182 - 194 195 - 207 208 - 220 221 - 233 234 - 246 247 - 255
14	BACKGROUND DIMMER Dimmer 0~100%	000 - 255
15	DIMMER FADE Preset dimmer speed from display menu Dimmer curve Fast to Slow	000 - 000 001 - 255

EXTENDED - EXT 16ch			
MODE EXT 16 Ch	FUNCTION		DMX Value
1	PIXEL1	0~100% RED	000 - 255
2		0~100% GREEN	000 - 255
3		0~100% BLUE	000 - 255
4		0~100% WHITE	000 - 255
5	PIXEL2	0~100% RED	000 - 255
6		0~100% GREEN	000 - 255
7		0~100% BLUE	000 - 255
8		0~100% WHITE	000 - 255
9	PIXEL3	0~100% RED	000 - 255
10		0~100% GREEN	000 - 255
11		0~100% BLUE	000 - 255
12		0~100% WHITE	000 - 255
13	PIXEL4	0~100% RED	000 - 255
14		0~100% GREEN	000 - 255
15		0~100% BLUE	000 - 255
16		0~100% WHITE	000 - 255

EXTENDED - EXT 21ch			
MODE EXT 21 Ch	FUNCTION		DMX Value
1	PIXEL1	0~100% RED	000 - 255
2		0~100% GREEN	000 - 255
3		0~100% BLUE	000 - 255
4		0~100% WHITE	000 - 255
5	PIXEL2	0~100% RED	000 - 255
6		0~100% GREEN	000 - 255
7		0~100% BLUE	000 - 255
8		0~100% WHITE	000 - 255
9	PIXEL3	0~100% RED	000 - 255
10		0~100% GREEN	000 - 255
11		0~100% BLUE	000 - 255
12		0~100% WHITE	000 - 255
13	PIXEL4	0~100% RED	000 - 255
14		0~100% GREEN	000 - 255
15		0~100% BLUE	000 - 255
16		0~100% WHITE	000 - 255
17	DIMMER 0~100%		000 - 255
18	STROBE		
	No function		000 - 030
	Strobe Slow to Fast		031 - 100
	No function		101 - 130
19	COLOR FUNCTION		
	No Function		000 - 010
	CTC Function		011 - 039
	Forward Spin		040 - 059
20	Forward Spin		
	Rainbow Effect - Slow to Fast		000 - 255
	Reverse Spin		
	Rainbow Effect - Slow to Fast		000 - 255

20	Color Preset (fade change)		
	R 100% G 0~100% B 0%		000 - 028
	R 100%~0% G 100% B 0%		029 - 056
	R 0% G 100% B 0~100%		057 - 084
	R 0% G 100%~0% B 100%		084 - 112
	R 0%~100% G 0% B 100%		113 - 140
	R 100% G 0% B 100%~0%		141 - 168
	R 100% G 0%~100% B 0%~100%		169 - 196
	R 100%~0% G 100%~0% B 100%		197 - 224
	R 100% G 100% B 100% W 100%		225 - 255
21	Halo DWE		
	Dimmer 0~100%		000 - 255
	DIMMER FADE		
	Preset dimmer speed from display menu		000 - 000
	Dimmer curve Fast to Slow		001 - 255

EXTENDED - EXT 27ch			
MODE EXT 27 Ch	FUNCTION		DMX Value
1	PIXEL1	0~100% RED	000 - 255
2		0~100% GREEN	000 - 255
3		0~100% BLUE	000 - 255
4		0~100% WHITE	000 - 255
5	PIXEL2	0~100% RED	000 - 255
6		0~100% GREEN	000 - 255
7		0~100% BLUE	000 - 255
8		0~100% WHITE	000 - 255
9	PIXEL3	0~100% RED	000 - 255
10		0~100% GREEN	000 - 255
11		0~100% BLUE	000 - 255
12		0~100% WHITE	000 - 255
13	PIXEL1	0~100% RED	000 - 255
14		0~100% GREEN	000 - 255
15		0~100% BLUE	000 - 255
16		0~100% WHITE	000 - 255
17	COLOR FUNCTION		
	No Function		000 - 010
	CTC Function		011 - 039
	Forward Spin		040 - 059
	Reverse Spin		060 - 079
	Color Presets		080 - 099
	HALO DWE		100 - 119
	TBD		120 - 255

18	CTC Function (fade change) 2000K~3000K 3000K~4000K 4000K~5600K 5600K~8000K 8000K	000 - 223 224 - 231 232 - 239 240 - 247 248 - 255
	Forward Spin Rainbow Effect - Slow to Fast	000 - 255
	Reverse Spin Rainbow Effect - Slow to Fast	000 - 255
	Color Preset (fade change) R 100% G 0~100% B 0% R 100%~0% G 100% B 0% R 0% G 100% B 0~100% R 0% G 100%~0% B 100% R 0%~100% G 0% B 100% R 100% G 0% B 100%~0% R 100% G 0%~100% B 0%~100% R 100%~0% G 100%~0% B 100% R 100% G 100% B 100% W 100%	000 - 028 029 - 056 057 - 084 084 - 112 113 - 140 141 - 168 169 - 196 197 - 224 225 - 255
	Halo DWE Dimmer 0~100%	000 - 255
	DYNAMIC PATTERNS No Function	000 - 010
	Pattern 1	011 - 020
	Pattern 2	021 - 030
	Pattern 3	031 - 040
	Pattern 4	041 - 050
	Pattern 5	051 - 060
	Pattern 6	061 - 070
	Pattern 7	071 - 080
	Pattern 8	081 - 090
	Pattern 9	091 - 100
	Pattern 10	101 - 110
	Pattern 11	111 - 120
	Pattern 12	121 - 130
	Pattern 13	131 - 140
	Pattern 14	141 - 150
	Pattern 15	151 - 160
	Pattern 16	161 - 170
	Pattern 17	171 - 180
	Pattern 18	181 - 190
	Pattern 19	191 - 200
	Pattern 20	201 - 210
	Pattern 21	211 - 220
	Pattern 22	221 - 230
	Pattern 23	231 - 240
	Random FX	241 - 255

20	PATTERNS SPEED Static indexing Speed slow to fast TBD / Not used	000 - 029 030 - 140 141 - 255
21	FOREGROUND COLOR No function (main RGBW channels control) R G B W GB RB RG RGB RW GW BW RGW RBW GBW RGBW White 2000K White 3000K White 4000K Color Cycling	000 - 012 013 - 025 026 - 038 039 - 051 052 - 064 065 - 077 078 - 090 091 - 103 104 - 116 117 - 129 130 - 142 143 - 155 156 - 168 169 - 181 182 - 194 195 - 207 208 - 220 221 - 233 234 - 246 247 - 255
22	FOREGROUND DIMMER 0~100%	000 - 255
23	BACKGROUND COLOR No function (main RGBW channels control) R G B W GB RB RG RGB RW GW BW RGW RBW GBW RGBW White 2000K White 3000K White 4000K Color Cycling	000 - 012 013 - 025 026 - 038 039 - 051 052 - 064 065 - 077 078 - 090 091 - 103 104 - 116 117 - 129 130 - 142 143 - 155 156 - 168 169 - 181 182 - 194 195 - 207 208 - 220 221 - 233 234 - 246 247 - 255
24	BACKGROUND DIMMER 0~100%	000 - 255

ARENACOB4FC

25	DIMMER 0~100%	000 - 255
26	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
27	DIMMER FADE Preset dimmer speed from display menu Dimmer curve Fast to Slow	000 - 000 001 - 255